JOSEPH I and V / R-U LED

ATTENTION! VOLTAGE!
After disconnecting the power supply, the luminaire and poles may still carry voltage for up to 40 seconds. Don't touch the poles during that time!

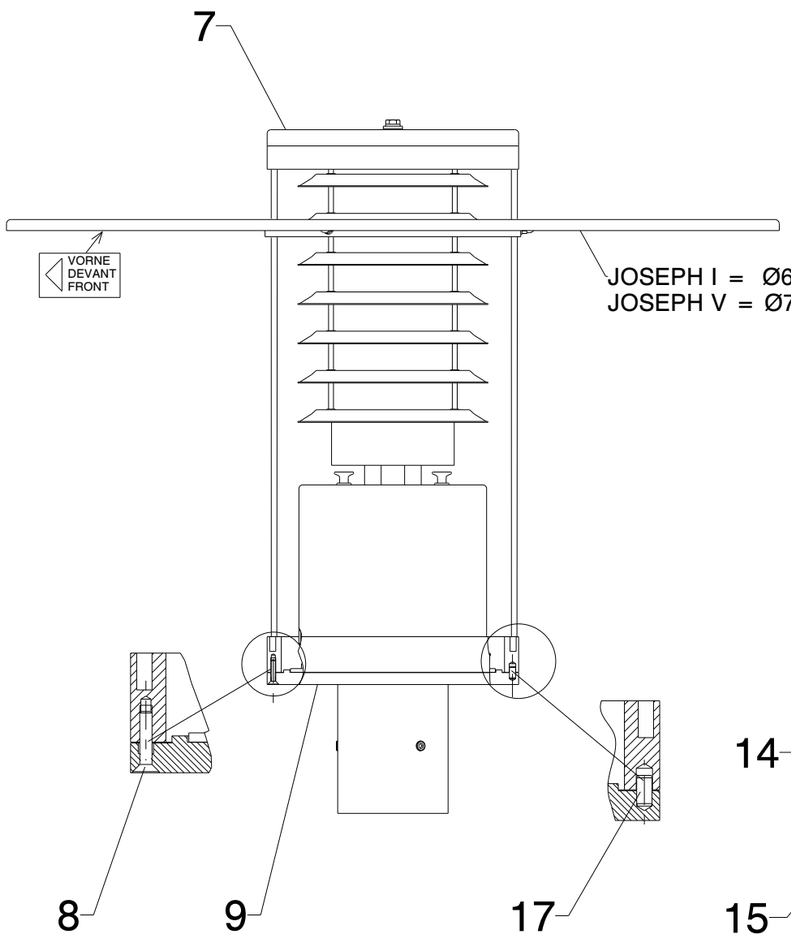

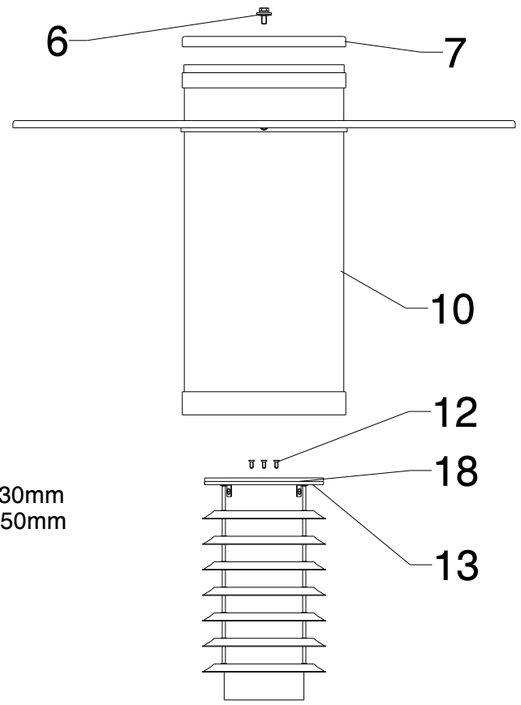

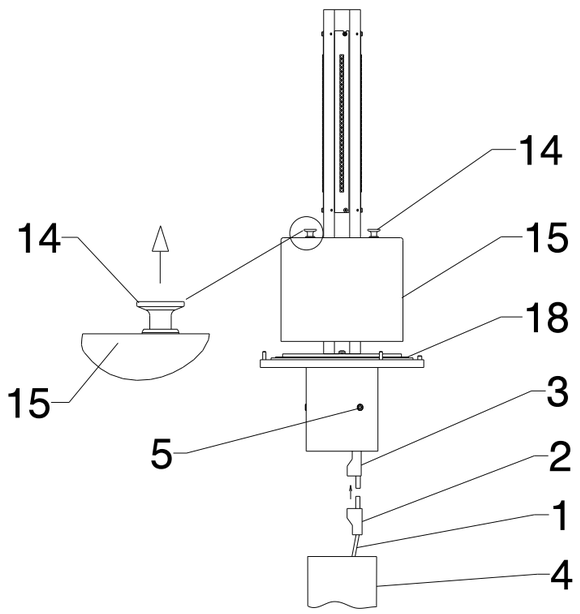

Attention!
Luminaires with asymmetrical illumination:
Please watch the range sign „FRONT“
on the luminaire head to install the luminaire in the right direction.

The luminaire is wired ready for connection.

Connect the cable (1) to the hatch (2) (attached to the luminaire) and connect it to the plug (3).

Set the complete luminaire head on the pole Ø 76mm(4).
First align, then brace the luminaire head with 3 pcs. M8x10 (5) for top entry Ø 76mm.

Due to thermal engineering reasons, only open the luminaire when changing electrical components.

Loosen 1 pc. hexagonal bolt M6x16 with sealing M6 (6) and remove the cap (7).

Loosen 3 pcs. countersunk screws M4 (8) from the base (9) and lift up the upper part of the luminaire head (10).

Loosen 3 pcs. countersunk screws M4 (12) and lift up the cooling plate with cylinder and louvre system (13).

To reach the LED pc board, lift up the quick fastener (14) and remove the covering (14).

Close the luminaire in retrospective application.

The guide pin (17) in the base (9) help to find the right position when putting the upper part of the luminaire head on the base.

ATTENTION! Don’t remove the thermal paste (18).