


Litter Bin PETRA K II H

with wood

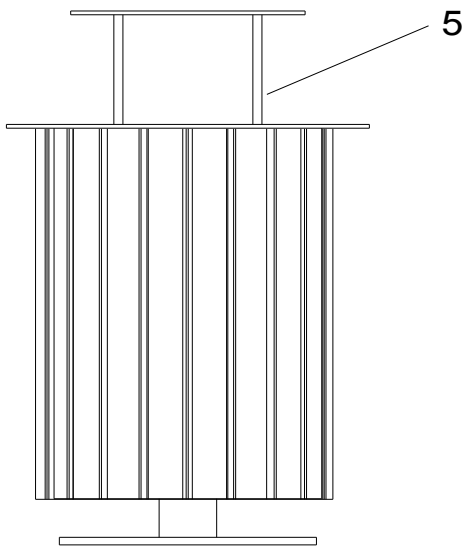

Option 1:
Put the bolt-on root (1) in the ground and fix it with concrete. Set the litter bin on the bolt-on root.

Option 2:
Set the litter bin (2) directly on top of the concrete foundation. Mark the fixing drills (3). Drill according to suitable anchor screws M10.

For both Options:
Fix the litter bin with 4 anchor screws M10.

For emptying, loose the lock (4) with tool M6 and take the liner (5) out.

